



# INTERQUARTZ®

## Voyager Hot Line Phone 9826N

### Installation


1. Plug in the line cord to the line socket at the bottom of the telephone.(Figure 3).
2. Plug in the handset cord to the handset socket at the telephone (Figure 2 & 3).
3. Set the ringer volume control as desired.
4. If the telephone is for wall mounting then you need to reposition the handset retainer as shown in (Figure 1) before mounting the telephone on the wall.
  - 4.1 Insert screw driver into slot and then prise to release handset retainer
  - 4.2 Turn the handset retainer around
  - 4.3 Insert the handset retainer back its slot

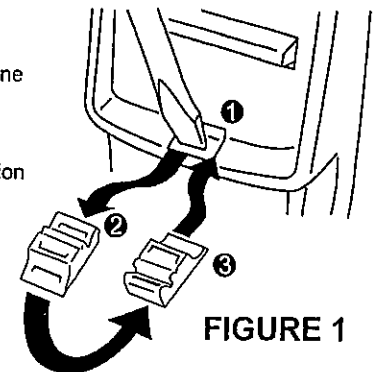

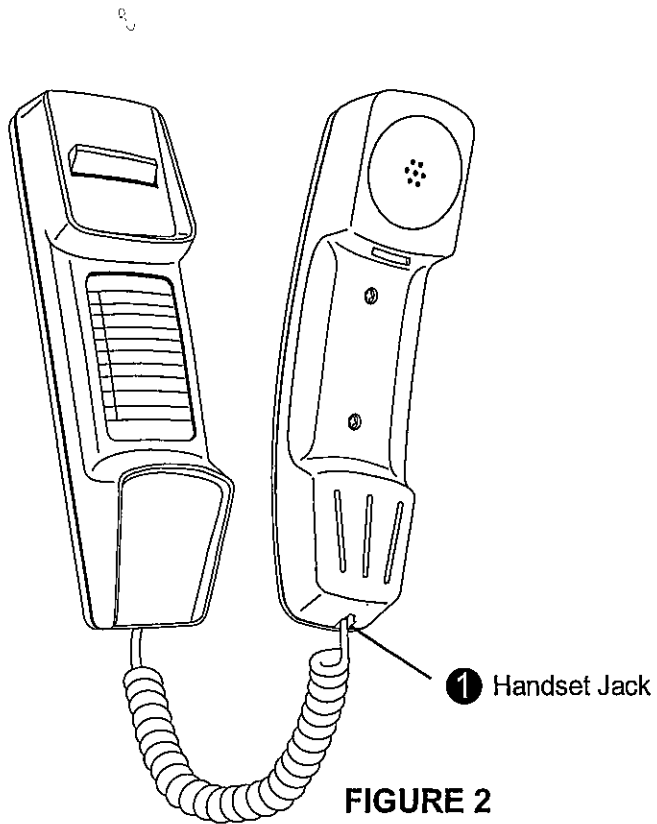

### Features – Front view

1. Handset cord connection socket  
To plug in the handset cord to the handset socket at the telephone.
2. Answer Only  
The telephone can be used only to answer incoming calls if connected to a PABX extension which does not support "Hot-line", or to a direct exchange line.
3. PABX "Hot line"  
The telephone will automatically call the number designated by the PABX once the handset is lifted if connected to a PABX which has the capability to "Hot-line".

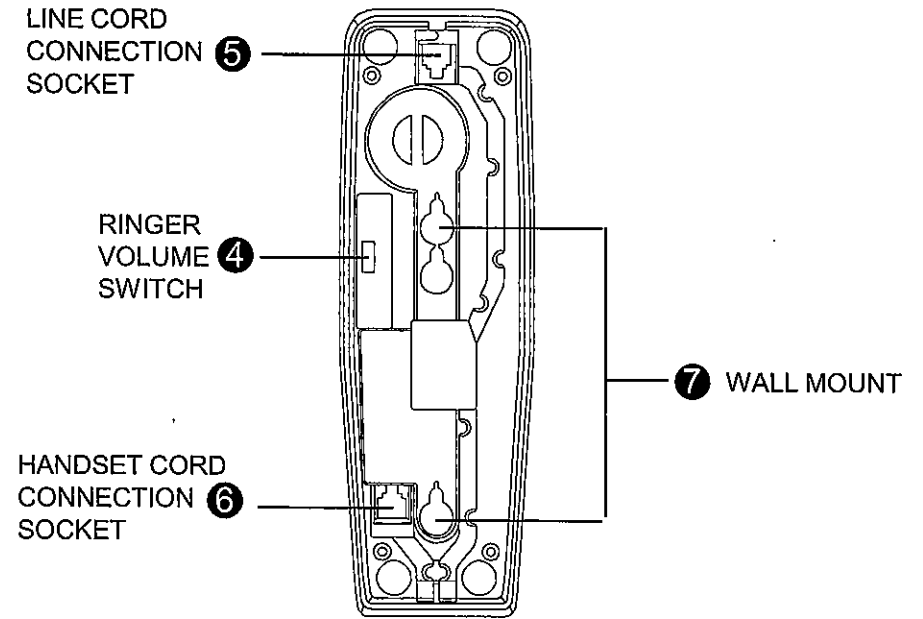

### Features – Bottom view

4. Ringer Volume switch (Hi/Low/Off)  
For select no sound (OFF), muted sound (LOW) or full sound (HIGH) ringing on incoming call.
5. Line cord connection socket  
To plug in the line cord to the line socket at the bottom of the telephone.
6. Handset cord connection socket  
To plug in the handset cord to the handset socket at the telephone.
7. Wall Mounting  
See installation section for wall mounting.